QTY.	PART NUMBER
1	05A-15-00-1-01-BASE PLATE
2	05A-15-00-1-02-CRANK SHAFT BALL BEARINGS
1	05A-15-00-1-03-CYLINDER BLOCK
1	05A-15-00-2-01-BALANCED BEAM
1	05A-15-00-2-02-CRANK SHAFT+FLYWHEEL
1	05A-15-00-2-03-POWER PISTON
1	05A-15-00-2-04-POWER PISTON CON-ROD
1	05A-15-00-2-05-BEAM CON-ROD
1	05A-15-00-2-06-DISPLACER
1	05A-15-00-2-07-DISPLACER CON-ROD
1	05A-15-00-M10x24 A-K CYL HEAD SCREW
2	05A-15-00-M3x6 A-K GRUB SCREW
13	05A-15-00-M4 DOME NUT
6	05A-15-00-M4x18 A-K CYL HEAD SCREW
4	05A-15-00-M4x24 A-K CYL HEAD SCREW
2	05A-15-00-M5x14 A-K CYL HEAD SCREW
6	05A-15-00-M5x18 A-K CYL HEAD SCREW
6	05A-15-00-M6x14 A-K CYL HEAD SCREW
6	05A-15-00-M6x18 A-K CYL HEAD SCREW



