

30	PART NUMBER
2	SOUHAM-184-1-01-SIDE FRAME
1	SOUHAM-184-1-02A-FRONT BUFFER BEAM
1	SOUHAM-184-1-02B-REAR BUFFER BEAM
6	SOUHAM-184-1-03-RUNNING BOARD INNER ANGLE BRACKET
8	SOUHAM-184-1-04-BUFFER BEAM ANGLE BRACKET
2	SOUHAM-184-1-05-REAR BUFFER BEAM ANGLE-1
1	SOUHAM-184-1-06-REAR BUFFER BEAM ANGLE-2
4	SOUHAM-184-1-07-HORN BLOCK
4	SOUHAM-184-1-08-HORN STAY
1	SOUHAM-184-1-09A-FRONT FRAME STRETCHER
1	SOUHAM-184-1-09B-REAR FRAME STRETCHER
1	SOUHAM-184-1-10-ROUND FRAME STRETCHER
1	SOUHAM-184-1-11-REAR FRAME SPACER PLATE
4	SOUHAM-184-1-12-AXLE BOX
1	SOUHAM-184-1-13-INSIDE MOTION PLATE
2	SOUHAM-184-1-14 OUTSIDE MOTION PLATE
2	SOUHAM-184-1-15-OUTSIDE MOTION PLATE BRACKET
2	SOUHAM-184-1-16-WEIGHSHAFT BEARING
4	SOUHAM-184-1-17- OUTSIDE MOTION PLATE GUIDE BRACKET
4	SOUHAM-184-1-18-CROSS HEAD SLIDE BAR
2	SOUHAM-184-1-19-CYLINDER
2	SOUHAM-184-1-20-CYLINDER FRONT LID
2	SOUHAM-184-1-21-CYLINDER REAR LID
2	SOUHAM-184-1-22-PISTON ROD GLAND NUT
2	SOUHAM-184-1-23-STEAM CHEST
2	SOUHAM-184-1-24-STEAM CHEST COVER
2	SOUHAM-184-1-25-VALVE SPINDLE ROD GLAND NUT
2	SOUHAM-184-1-26-SLIDE VALVE ROD GUIDE
2	SOUHAM-184-1-27-BRAKE CROSS SHAFT BUSH
2	SOUHAM-184-1-28-EXHAUST PIPE + FLANGE
1	SOUHAM-184-1-29-WATER FEED PUMP BODY
1	SOUHAM-184-1-30-WATER FEED PUMP BOTTOM INTAKE
1	SOUHAM-184-1-31-WATER FEED PUMP TOP OUTLET
2	SOUHAM-184-1-32-WATER FEED PUMP BALL VALVE
1	SOUHAM-184-1-33-WATER FEED PUMP RAM STOP NUT
3	SOUHAM-184-1-34-WATER FEED PUMP PIPE NUT
4	SOUHAM-184-1-35-LEAF SPRING PACK
4	SOUHAM-184-1-36-LEAF SPRING HOUSING
4	SOUHAM-184-1-37-LEAF SPRING PIN
4	SOUHAM-184-1-38-LEAF SPRING PIN GUIDE
12	SOUHAM-184-1-39-LEAF SPRING HANGER
8	SOUHAM-184-1-40-LEAF SPRING HANGER TOP WASHER
8	SOUHAM-184-1-41-LEAF SPRING HANGER SPACER
8	SOUHAM-184-1-42-LEAF SPRING HANGER BOLT
1	SOUHAM-184-1-43-OIL CHECK VALVE PIPE NUT
2	SOUHAM-184-1-44-VALVE CHEST LID INLET FLANGE
1	SOUHAM-184-1-45-VALVE CHEST LID INLET TEE
1	SOUHAM-184-1-46-OIL CHECK VALVE BODY
1	SOUHAM-184-1-47-OIL CHECK VALVE BALL VALVE
1	SOUHAM-184-1-48-OIL CHECK VALVE PLUNGER
1	SOUHAM-184-1-49-OIL CHECK VALVE PLUNGER SPRING
1	SOUHAM-184-1-50-OIL CHECK VALVE SPRING RETAINER
1	SOUHAM-184-1-51-EXHAUST TEE
1	SOUHAM-184-1-52-BLAST NOZZLE BODY
4	SOUHAM-184-1-53-BLAST NOZZLE BLOWER JET
1	SOUHAM-184-1-53A-BLAST NOZZLE PIPE NUT
1	SOUHAM-184-1-54-LEADING BRAKE BEAM
1	SOUHAM-184-1-55-TRAILING BRAKE BEAM
4	SOUHAM-184-1-56-BRAKE HANGER
4	SOUHAM-184-1-57-BRAKE SHOE
4	SOUHAM-184-1-58-BRAKE HANGER PIN
4	SOUHAM-184-1-59-BRAKE BEAM FORK
2	SOUHAM-184-1-60-BRAKE BEAM CON-ROD
1	SOUHAM-184-1-61-BRAKE CROSS SHAFT
2	SOUHAM-184-1-63-BRAKE CROSS SHAFT LEVER
2	SOUHAM-184-1-64-BRAKE LEVER FORK
2	SOUHAM-184-1-65-TRAIL BRAKE BEAM -ROD COUPLER
2	SOUHAM-184-1-66-TRAILNG BRAKE BEAM ROD
1	SOUHAM-184-1-67-BRAKE COLUMN FORK
1	SOUHAM-184-1-68-BRAKE NUT
1	SOUHAM-184-1-69-REVERSING STAND
1	SOUHAM-184-1-70-REVERSING SECTOR PLATE
2	SOUHAM-184-1-71-REVERSING SECTOR PLATE SPACER
1	SOUHAM-184-1-72-REVERSING LEVER
1	SOUHAM-184-1-73-REVERSING LEVER LATCH
1	SOUHAM-184-1-74-REVERSING LEVER LATCH BLOCK
1	SOUHAM-184-1-75-REVERSING LEVER TRIGGER
1	SOUHAM-184-1-76-REVERSING STAND SPACER
1	SOUHAM-184-1-79-ASHPAN
1	SOUHAM-184-1-80-ASHPAN RETAINING PIN
2	SOUHAM-184-1-81-CYLINDER PLUG
1	SOUHAM-184-1-82-LH-WATER TO BOILER SUPPLY PIPE
1	SOUHAM-184-1-83-RH-WATER TO BOILER SUPPLY PIPE
1	SOUHAM-184-1-84-REVERSING LEVER BEARING SCREW
2	SOUHAM-184-1-85-BOILR ANGLE MOUNTING BRACKET
1	SOUHAM-184-1-86-FIRE BOX GRATE

30	PART NUMBER
2	SOUHAM-184-2-01-WHEEL AXLE
4	SOUHAM-184-2-02-WHEEL
4	SOUHAM-184-2-03-OUT SIDE CRANK
2	SOUHAM-184-2-04-OUT SIDE CRANK LEADING CRANKPIN
2	SOUHAM-184-2-05-LEADING CRANKPIN RETAINING WASHER
1	SOUHAM-184-2-06-RH-DRIVEN CRANKPIN
1	SOUHAM-184-2-07-LH-DRIVEN CRANKPIN
1	SOUHAM-184-2-08-LH-DRIVEN CRANKPIN RETAINING COLLAR
1	SOUHAM-184-2-09-MECH LUB CRANK
2	SOUHAM-184-2-10-VALVE GEAR ECCENTRIC
2	SOUHAM-184-2-10-VALVE GEAR ECCENTRIC
1	SOUHAM-184-2-11-FEED PUMP ECCENTRIC
1	SOUHAM-184-2-12-FEED PUMP ECCENTRIC STRAP
1	SOUHAM-184-2-13-FEED PUMP RAM
2	SOUHAM-184-2-14-COUPLING ROD
2	SOUHAM-184-2-15-COUPLING ROD FRONT BEARING
2	SOUHAM-184-2-16-COUPLING ROD REAR BEARING
2	SOUHAM-184-2-17-PISTON + ROD
2	SOUHAM-184-2-18-CROSSHEAD
2	SOUHAM-184-2-19-CROSSHEAD GUDGEON PIN
2	SOUHAM-184-2-20-CON-ROD
2	SOUHAM-184-2-21-COUPLING ROD REAR BEARING
2	SOUHAM-184-2-22-SLIDE VALVE
2	SOUHAM-184-2-23-SLIDE VALVE NUT
2	SOUHAM-184-2-24-SLIDE VALVE SPINDLE
2	SOUHAM-184-2-25-SLIDE VALVE GRUB SCREW
2	SOUHAM-184-2-26-SLIDE VALVE SPINDLE COUPLING
2	SOUHAM-184-2-27-SLIDE VALVE INTERM. ROD-1
2	SOUHAM-184-2-30-SLIDE VALVE ROD CROSSHEAD
4	SOUHAM-184-2-31-VALVE GEAR ECC. STRAP
2	SOUHAM-184-2-32-VALVE GEAR ECC. STRAP EXTN-1
2	SOUHAM-184-2-33-VALVE GEAR ECC. STRAP EXTN-2
2	SOUHAM-184-2-34-EXPANSION LINK
2	SOUHAM-184-2-35-EXPANSION LINK BRACKET
2	SOUHAM-184-2-36-DIE BLOCK
1	SOUHAM-184-2-37-WEIGHSHAFT
4	SOUHAM-184-2-38-LIFTING ARM
1	SOUHAM-184-2-39-REVERING ARM
4	SOUHAM-184-2-40-LIFTING LINK
1	SOUHAM-184-2-41-REACH ROD
2	SOUHAM-184-2-42-CON-ROD SPACER
2	SOUHAM-184-2-43-SLIDE VALV ECCENTRIC SPACER
30	PART NUMBER
2	SOUHAM-184-3-01-RUNNING BOARD OUTER ANGLE BRACKET
1	SOUHAM-184-3-02-LH-RUNNING BOARD
1	SOUHAM-184-3-03-RH-RUNNING BOARD
1	SOUHAM-184-3-04-FRONT RUNNING BOARD
1	SOUHAM-184-3-05-CABIN FOOTPLATE
1	SOUHAM-184-3-06-MECH. LUB. OIL CONTAINER
1	SOUHAM-184-3-07-MECH. LUB.ADAPTOR RING
1	SOUHAM-184-3-08-MECH. LUB. CYL.+ PRESSURE CHAMBER
1	SOUHAM-184-3-09-MECH. LUB. BOTTOM SPRING RETAINER SCREW
1	SOUHAM-184-3-10-MECH. LUB. PRESSURE SPRING
1	SOUHAM-184-3-11-MECH. LUB. PLUNGER
1	SOUHAM-184-3-12-MECH. LUB. BALL VALVE
1	SOUHAM-184-3-13-MECH. LUB. RAM PRESSURE SPRING
1	SOUHAM-184-3-14-MECH. LUB. RAM SEAL
1	SOUHAM-184-3-15-MECH. LUB. RAM SEAL NUT
1	SOUHAM-184-3-16-MECH. LUB. RAM
1	SOUHAM-184-3-17-MECH. LUB. RACHET
1	SOUHAM-184-3-18-MECH. LUB. ECCENTRIC SHAFT
1	SOUHAM-184-3-19-MECH. LUB. ECCENTRIC DISC
1	SOUHAM-184-3-20-MECH. LUB. ECCENTRIC SHAFT BUSH
1	SOUHAM-184-3-21-MECH. LUB. PAWL-1
1	SOUHAM-184-3-22-MECH. LUB. PAWL-1 SHAFT
1	SOUHAM-184-3-23-MECH. LUB. PAWL-1 SPRING
1	SOUHAM-184-3-24-MECH. LUB. PAWL-1 SPRING PIN
1	SOUHAM-184-3-25-MECH. LUB. PAWL-2
1	SOUHAM-184-3-26-MECH. LUB. PAWL-2 SHAFT
1	SOUHAM-184-3-27-MECH. LUB. PAWL-2 SPRING
1	SOUHAM-184-3-28-MECH. LUB. SWING ARM
1	SOUHAM-184-3-29-MECH. LUB. CON-ROD
1	SOUHAM-184-3-30-MECH. LUB. PAWL-2 SPRING PIN
1	SOUHAM-184-3-31-MECH. LUB. PIPE NUT
1	SOUHAM-184-3-32-MECH. LUB. STEAM PIPE
1	SOUHAM-184-3-33-HAND BRAKE MAIN COLUMN
1	SOUHAM-184-3-34-HAND BRAKE SCREW SPINDLE
2	SOUHAM-184-3-35-REAR STEP

30	PART NUMBER
1	SOUHAM-184-4-01-FOUNDATION RING
1	SOUHAM-184-4-02-FIRE BOX BACK PLATE
1	SOUHAM-184-4-03-FIRE BOX TUBE PLATE
1	SOUHAM-184-4-04-FIRE BOX MANTEL
1	SOUHAM-184-4-05-FIRE BOX CROWN STAY-1
1	SOUHAM-184-4-06-BACKHEAD
1	SOUHAM-184-4-07-THROAT PLATE
1	SOUHAM-184-4-08-BACKHEAD OUTER MANTEL
6	SOUHAM-184-4-09-M14x20 BUSH
3	SOUHAM-184-4-10-M20x26-BUSH
2	SOUHAM-184-4-11-M26x32-BUSH
1	SOUHAM-184-4-12-M32x37 BUSH
1	SOUHAM-184-4-13-M26x58 BUSH
2	SOUHAM-184-4-14-BACKHEAD MAIN STAY
50	SOUHAM-184-4-15-FIRE BOX STAY D8x16
27	SOUHAM-184-4-16-FIRE BOX STAY D8x20
1	SOUHAM-184-4-17-BOILER SHELL
1	SOUHAM-184-4-18-SMOKE BOX TUBE PLATE
15	SOUHAM-184-4-19-BOILER TUBE
1	SOUHAM-184-4-20-BOILER SUPERHEATER FLUE
1	SOUHAM-184-4-21-STEAM DOME MOUNTING RING
1	SOUHAM-184-4-22-SOLID STAY
1	SOUHAM-184-4-24-FIRE DOOR SURROUND
1	SOUHAM-184-4-25-BLOWER NIPPLE
1	SOUHAM-184-4-26-MANIFOLD
1	SOUHAM-184-4-27-WHISTLE VALVE MAIN BODY
1	SOUHAM-184-4-28-WHISTLE BALL VALVE
1	SOUHAM-184-4-29-WHISTLE VALVE SPRING
1	SOUHAM-184-4-30-WHISTLE VALVE OPERATING HEAD
3	SOUHAM-184-4-31-CHECK VALVE MAIN BODY
3	SOUHAM-184-4-32-CHECK VALVE INLET NIPPLE
3	SOUHAM-184-4-33-CHECK VALVE BALL VALVE
3	SOUHAM-184-4-34-CHECK VALVE TOP SCREW
8	SOUHAM-184-4-35-M14x9 PIPE NUT
4	SOUHAM-184-4-36-M16x9 PIPE NUT
1	SOUHAM-184-4-37-M12x6 PIPE NUT
2	SOUHAM-184-4-38-BLOWDOWN VALVE MAIN BODY
2	SOUHAM-184-4-40-BLOWDOWN VALVE SCREW STEM
2	SOUHAM-184-4-41-BLOWDOWN VALVE SCREW CAP
1	SOUHAM-184-4-42-BLOWER VALVE MAIN BODY
1	SOUHAM-184-4-43-BLOWER VALVE STEM SCREW NUT
1	SOUHAM-184-4-44-BLOWER VALVE STEM
1	SOUHAM-184-4-45-BLOWER VALVE HAND WHEEL
1	SOUHAM-184-4-46-M10x4.5 STEM NUT
1	SOUHAM-184-4-47-BLOWER VALVE STEAM SUPPLY PIPE
1	SOUHAM-184-4-48-SAFETY VALVE MAIN BODY
1	SOUHAM-184-4-49-SAFETY VALVE CENTRAL STEM AND VALVE
1	SOUHAM-184-4-50-SAFETY VALVE SPRING
1	SOUHAM-184-4-51-SAFETY VALVE SPING ADJUSTER
1	SOUHAM-184-4-52-SAFETY VALVE LOCKING RING
1	SOUHAM-184-4-53-SAFETY VALVE RELEASE LEVER
1	SOUHAM-184-4-54-SAFETY VALVE COVER
1	SOUHAM-184-4-55-REGULATOR STUFFING BOX
1	SOUHAM-184-4-56-REGULATOR STUFFING BOX GLAND
1	SOUHAM-184-4-57-REGULATOR SPINDLE
1	SOUHAM-184-4-58-REGULATOR CONTROL HANDLE
1	SOUHAM-184-4-59-BLOWER VALVE PIPE LINE
1	SOUHAM-184-4-60-DOME REGULATOR HOUSING
1	SOUHAM-184-4-61-DOME REGULATOR BODY
1	SOUHAM-184-4-62-DOME REGULATOR BODY COVER PLATE
1	SOUHAM-184-4-63-DOME REGULATOR VALVE DISC
1	SOUHAM-184-4-64-DOME REGULATOR SPINDLE PLATE
2	SOUHAM-184-4-65-DOME REGULATOR LINK PLATE
1	SOUHAM-184-4-66-MAIN STEAM SUPPLY PIPE
1	SOUHAM-184-4-67-STEAM PIPE HEADER SCREW NUT
1	SOUHAM-184-4-68-STEAM PIPE HEADER BOX
1	SOUHAM-184-4-69-SUPER HEATED STEAM PIPE-1
1	SOUHAM-184-4-70-SUPER HEATED STEAM PIPE-2
1	SOUHAM-184-4-71-SUPER HEATED STEAM PIPE END
1	SOUHAM-184-4-72-WTR.LVL GAUGE TOP BODY
1	SOUHAM-184-4-73-WTR.LVL GAUGE BOTTOM BODY
1	SOUHAM-184-4-74-WTR.LVL GAUGE GLASS TUBE
1	SOUHAM-184-4-75-WTR.LVL GAUGE TOP STOP
1	SOUHAM-184-4-76-WTR.LVL GAUGE SPINDLE
1	SOUHAM-184-4-77-WTR.LVL GAUGE OUTFLOW PIPE
1	SOUHAM-184-4-79-PRESSURE GAUGE
1	SOUHAM-184-4-80-PRESSURE GAUGE SUPPLY PIPE
1	SOUHAM-184-4-81-FIRE BOX DOOR
1	SOUHAM-184-4-82-FIRE BOX DOOR HINGE BRACKET
1	SOUHAM-184-4-83-FIRE BOX DOOR CATCH
1	SOUHAM-184-4-85-SNIFFING VALVE PIPE
1	SOUHAM-184-4-86-BLAST NOZZLE PIPE
1	SOUHAM-184-4-87-BOILER INSULATION
1	SOUHAM-184-4-88-BOILER GLADDING
4	SOUHAM-184-4-89-DOME REG. VALVE DISC SCREW-1
1	SOUHAM-184-4-90-DOME REG. VALVE DISC SCREW-2

30	PART NUMBER
1	SOUHAM-184-5-01-SMOKEBOX-BOILER MOUNTING RING
1	SOUHAM-184-5-02-SMOKEBOX FRONT PLATE
1	SOUHAM-184-5-03-SMOKEBOX BACK PLATE
1	SOUHAM-184-5-04-SMOKEBOX MANTEL PLATE
2	SOUHAM-184-5-05-SMOKEBOX HINGE BRACKET
2	SOUHAM-184-5-06-SMOKEBOX CROSSBAR BRACKET
1	SOUHAM-184-5-07-SMOKEBOX CROSSBAR
1	SOUHAM-184-5-08-SMOKEBOX DOOR
2	SOUHAM-184-5-09-SMOKEBOX DOOR HINGE STRAP
1	SOUHAM-184-5-10-SMOKEBOX DOOR HINGE PIN
1	SOUHAM-184-5-11-SMOKEBOX DOOR HANDLE-1
1	SOUHAM-184-5-12-SMOKEBOX DOOR HANDLE-2
1	SOUHAM-184-5-13-SMOKEBOX DOOR DART
1	SOUHAM-184-5-14-SMOKEBOX CHIMNEY SEAT
1	SOUHAM-184-5-15-SMOKEBOX CHIMNEY
1	SOUHAM-184-5-16-SMOKEBOX FLOOR
2	SOUHAM-184-5-17-SMOKEBOX SPACER BLOCK
1	SOUHAM-184-5-18A-SNIFFING VALVE MAIN BODY
1	SOUHAM-184-5-18B-SNIFFING VALVE BALL VALVE
1	SOUHAM-184-5-18C-SNIFFING VALVE SCREW PLUG
1	SOUHAM-184-5-19-M14x9 PIPE NUT
1	SOUHAM-184-5-20-SPECIAL M20 NUT
4	SOUHAM-184-5-21-CHIMNEY HOLDING SPACER

30	PART NUMBER
1	SOUHAM-184-6-01-WATER TANK FRONT PLATE
1	SOUHAM-184-6-02-WATER TANK REAR PLATE
1	SOUHAM-184-6-03-WATER TANK OUTER SHELL
1	SOUHAM-184-6-04-WATER TANK INNER SHELL
1	SOUHAM-184-6-05-WATER FILLER BARREL
1	SOUHAM-184-6-06-WATER FILLER BARREL LID
1	SOUHAM-184-6-07-BALANCE PIPE
3	SOUHAM-184-6-08-HAND PUMP SCREW NIPPLE
1	SOUHAM-184-6-09-BYPASS VALVE MAIN BODY
1	SOUHAM-184-6-10-BYPASS VALVE STEM
1	SOUHAM-184-6-11-M14x5 STEM NUT
1	SOUHAM-184-6-12-BYPASS VALVE HAND WHEEL
2	SOUHAM-184-6-13-M14x9 PIPE NUT
1	SOUHAM-184-6-14-M14 STOP NUT
1	SOUHAM-184-6-15-BYPASS PIPE
1	SOUHAM-184-6-16-WATER FEED PUMP PIPE
1	SOUHAM-184-6-17-DOME
1	SOUHAM-184-6-18-WATER TANK MOUNTING ANGLE
8	SOUHAM-184-6-19-TANK HAND RAIL SUPPORT
2	SOUHAM-184-6-20-TANK HAND RAIL
3	SOUHAM-184-6-21-SPECIAL M14 NUT
1	SOUHAM-184-6-22-SPECIAL M20 NUT
1	SOUHAM-184-6-23-WATER TANK CENTER TUBE
1	SOUHAM-184-6-24-M14x7 PIPE NUT

30	PART NUMBER
1	SOUHAM-184-7-01-BOTTOM ANGLE FRAME
2	SOUHAM-184-7-02-FRONT+REAR ANGLE FRAME
2	SOUHAM-184-7-03-ROOF ANGLE FRAME
1	SOUHAM-184-7-04-FRONT SPECTACLE PLATE
1	SOUHAM-184-7-05-REAR SPECTACLE PLATE
2	SOUHAM-184-7-06-WINWOW + SURROUND
2	SOUHAM-184-7-07-CABIN SIDE PLATE
2	SOUHAM-184-7-08-CABIN SIDE PLATE TRIM
4	SOUHAM-184-7-09-REAR PLATE WINDOW TRIM
1	SOUHAM-184-7-10-CABIN ROOF
4	SOUHAM-184-7-11-CABIN DOOR HANDLE
2	SOUHAM-184-7-12-NAME PLATE
1	SOUHAM-184-7-13-COAL BUNKER SIDE PLATE
1	SOUHAM-184-7-13-COAL BUNKER SIDE PLATE
1	SOUHAM-184-7-14-COAL BUNKER COVER PLATE
2	SOUHAM-184-7-15-REAR PLATE WINDOW

30	PART NUMBER
1	SOUHAM-184-8-01-MAIN BODY
1	SOUHAM-184-8-02-NOZZLE
1	SOUHAM-184-8-03-PUMP BODY
1	SOUHAM-184-8-04-PUMP BOTTOM WATER INLET NIPPLE
1	SOUHAM-184-8-05-PUMP TOP WATER OUTLET NIPPLE
2	SOUHAM-184-8-06-BALL VALVE
1	SOUHAM-184-8-07-PISTON
1	SOUHAM-184-8-08-PUMP HANDLE
1	SOUHAM-184-8-09-PISTON SEAL
2	SOUHAM-184-8-10-HANDLE LINK
1	SOUHAM-184-8-11-PUMP HANDLE EXSTENTION
2	SOUHAM-184-8-12-M12x7 PIPE NUT
1	SOUHAM-184-8-13-INLET PIPE
1	SOUHAM-184-8-14-OUTLET PIPE

FOR FASTENERS REFER TO SHEET 17

PLEASE NOTE THIS AN A2 SIZE SHEET

NOTES:		DRAWING CONTENTS	PROJECT No: 07B-11-00	PROJECTION	MODEL SCALE: 1:1
TITLE					
COAL FIRED NARROW GAUGE STEAM LOCO CALLED "SOUHAM" (7.25"/184mm GAUGE)		BILL OF MATERIALS	JDW DRAUGHTING SERVICES J.A.M. DE WAAL, 12 BRIGHTWELL STREET PAPA KURA 2110, NEW ZEALAND. PHONE: 0064 09 2988815. MOB: 0211791000 E-MAIL: dewaal@xtra.co.nz.	 JDWDS DATE: SEPT 2016	DWG SCALE:NTS @ A2 OR AS SHOWN Copyright © J.A.M. DE WAAL PAPA KURA NZ
				SHEET: 03 OF 18	A2 No: SOUHAM-03